

How to Use the eSlate

The eSlate is a direct record electronic machine that any voter may use though it is provided to allow voters with disabilities, including those who are blind, mobility impaired or lack upper-body dexterity, to vote privately and independently. The eSlate will be in a booth that is wheelchair accessible.

- ▶ To view **How to Vote eSlate** video, [click here](#) (requires high speed connection).
- ▶ To view **How to Vote eSlate** slideshow, [click here](#) (requires PowerPoint software)



To vote with eSlate


Select your language

1. Select an English or Spanish ballot by turning the SELECT wheel to highlight your language in red.
2. Press the ENTER button to mark that choice.




Enter your access code

1. After signing in, as always, you will receive a four-digit access code.

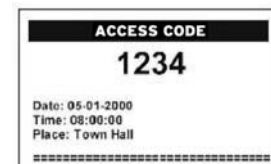

2. Enter the code by turning the SELECT wheel to highlight each number. **Press the ENTER button after highlighting each one.**

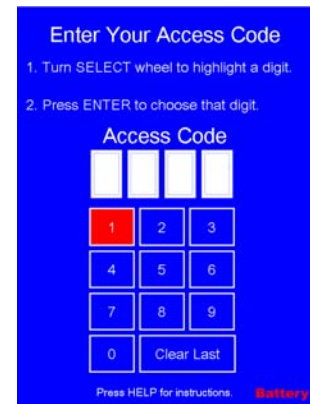

Mark your ballot choices

1. Turn the SELECT wheel to highlight your choice.
2. Press the ENTER button to mark that choice.
3. The box beside your choice will turn red and the highlight bar will automatically advance to the next contest.

